


# User Manual

programmable handset – item no. 139250

This programmable handset is an optional accessory available only for the series listed below (Figure 2). Program three height settings each for up to three individual users. At anytime, you can use the **UP/DOWN** buttons to adjust the height of the table without affecting the programmed heights.

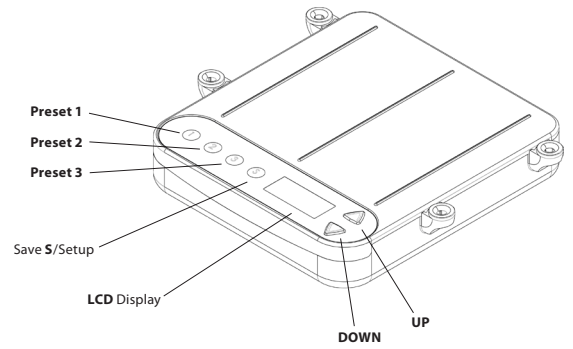

## Step 1 – program the series it is being used for (Figure 1)

- Press **S** for 10 seconds until the *model setup menu* is activated. (Be aware that the *user select menu* will display after 2 seconds. Continue to press the button).
- Select the model from the list (Figure 2) by using the **UP/DOWN** buttons. If you are unsure which frame model you have then you can find a silver CE-label (Figure 3.) near the top of your ConSet motor leg showing the series number.
- Press the **S** button again to save.
- Now raise the desk to the full height so that the maximum height is indicated by the display as per the *Setup No.* listed, i.e. 501-49 series will show 125/50".

For this example we will assume **501-27** series, so you would save as model **P4**.

## Step 2 – program or change the preset heights for each user

For this example we will assume there are three users: Jess as *user 1*, Max as *user 2* and Sam as *user 3* (Figure 4). You can set the heights in centimeters or inches.

- Press **S** for 2 seconds until the user menu is activated.
- Jess will select *user 1* with the **UP/DOWN** buttons.
- Press the **S** button again to save.

Press the **S + UP** to see cm or **S + DOWN** for inches, for 2 seconds.

Jess has selected to display inches and is the first to set up her favourite three heights of 30.0", 33.0" and for standing she requires 40.5".

- Now she moves the desk height to 30.0" using the **UP/DOWN** buttons.
- Next she must press **S** followed by **Preset 1** and hold both for 2 seconds. The **LCD Display** blinks twice then release the button. **Preset 1** is now stored at 30.0".

Jess now repeats this process to store **Preset 2** at 33.0" and **Preset 3** at 40.5".

Max, *user 2*, and Sam, *user 3*, can now enter their settings and switch to view centimeters instead of inches at any time.

## Step 3 – use your Preset positions

- First Jess must check *user 1* is selected or select this via **step 2 a)** and **b)**.
- Now Jess wants to stand up to work so she must press and hold **Preset 3**. The table will move and when 40.5" is reached it will stop automatically and the display will blink twice. Jess can release the button. For safety the table will stop if you release the button to early.

Figure 1

 


Figure 2

Desk frame	Production Series	Height range* cm/inch	Setup No.
501-15		68-120/27"-47"	P1
501-16		68-120/27"-47"	P9
501-19 NEW	Summer 2016	68-120/27"-47"	P9
501-19 OLD		68-120/27"-47"	P2
501-17		68-120/27"-47"	P1
501-25		68-118/27"-47"	P3
501-27		57-122/22"-48"	P4
501-37		57-122/22"-48"	P4
501-29		65-132/26"-52"	P5
501-49		65-125/26"-50"	P6
501-52		68-119/27"-47"	P7
501-53		65-125/26"-50"	P8

\*Press the **S + UP** to see cm or **S + DOWN** for inches, for 2 seconds.

Figure 3

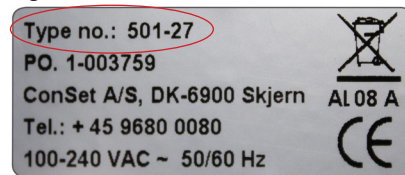


Figure 4

