

## PACKING LIST

<b>Frame</b>	<b>DCS</b>
Column	2
Feet	2
End pipe	2
Outer pipe	4
Connection pipe	2
Cable clamp	8
Rubber grip	4
Rubber washer	18
Hole cap	4

## Control box/ handset

<b>Control box</b>	<b>DCS</b>
Control box	1
Handset	1
AC cable, 2000 mm	1
Cable for control box, 1410 mm	2
Cable for handset, 1800 mm	1

## Screws

<b>Screw for rubber grip, M6 x 16mm, 20mm head</b>	<b>DCS</b>
Screw for rubber grip, M6 x 16mm, 20mm head	4
Screw for outer pipe, M6 x 16mm, 14mm head	4
Screw for feet, M10 x 20mm	8
Tailstock for con. pipe, M10 x 20mm	8
Screw for desktop	16
Screw for handset, M4 x 25mm	2

## INSTALLATION GUIDE

# MOBEL POSTURE


## ELECTRIC HEIGHT ADJUSTABLE DESK

### TIGHTENING TORQUE

Tailstock:	Maximum 6 Nm.
All screws:	Maximum 10 Nm.

**Make sure all screws are tightened, also after a period of use!**

### RESET THE DESK BEFORE USE

Press both  buttons at the same time for 3 seconds. Continue pressing the buttons until both columns are in lowest position. When finish reset, the control box makes a sound and the buttons can be released. Now the system is operational.


### Step 1



### Step 2




### Step 3

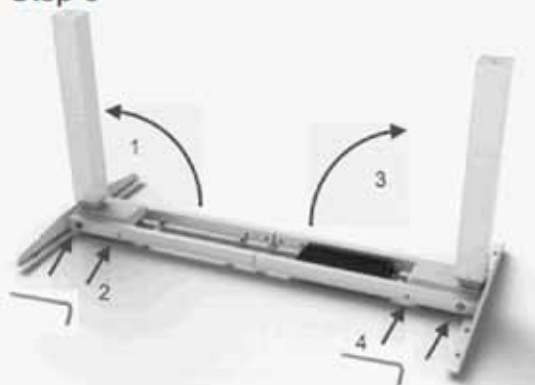

### Step 4



### Step 5

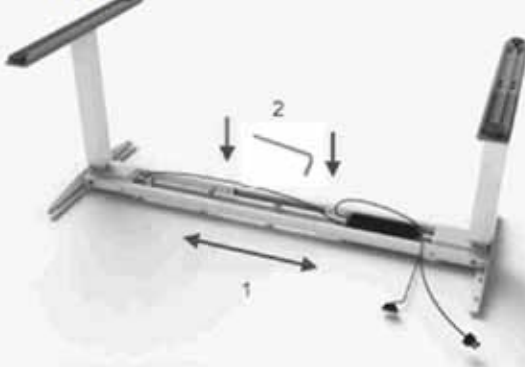

### Step 6

